



SHOP
MANUAL

MODEL "A"



order only genuine
kid parts

HOW TO ORDER PARTS

When ordering parts, state Part Number, KID Serial Number, Part Name, and Quantity Required --- DO NOT ORDER BY REFERENCE NUMBER.

To assure continued successful and trouble-free operation of your KID, order all parts from your authorized KID dealer or distributor.

DO NOT ACCEPT "WILL-FIT" PARTS. THEY MAY SHORTEN THE LIFE OF THE KID.

The information and specifications included in this Illustrated Parts List were in effect at the time of approval for printing. Kinetics International reserves the right, however, to discontinue or change any specifications or design at any time without notice and without incurring any obligation whatsoever.

TABLE OF CONTENTS

SECTION	PAGE
I KID DATA	1
II SPECIFICATIONS	3
• Fluid Capacities	3
• Fuel Specifications	3
• Oil Specifications	3
• Recommended Tools and Equipment	4
• Conversion Tables	5
III TRACTOR BODY	7
• Chassis	7
• Chassis Components	7
IV ENGINE	10
• Engine Removal and Disassembly	11
• Compression Check	11
• Power Train Removal	11
• Engine Disassembly	13
A. Flywheel Alternator	13
B. Air Shrouding	13
C. Carburetor and Manifold	15
D. Cylinder Heads	15
E. Distributor	15
F. Gear Cover	15
G. Camshaft Gear	16
H. Idler Gear and Shaft	16
I. Oil Pan	16
J. Oil Pump	17
K. Pistons and Connecting Rods	17
L. Crank Case	18
1. Crankshaft	18
2. Cylinder Bore	19
3. Piston Rings	23
4. Connecting Rods	23
5. Conrod Bearings	23
6. Valves	23
7. Valve Guides	24
8. Valve Rotors	24
9. Camshaft	24
10. Valve Tappets	25

• Fuel System	25
A. Carburetor	25
• Air Intake System	27
A. General	27
B. Air Cleaner and Piping	27
• Lubricating Oil System	28
A. Lubricating oil pump	28
B. Filter	28
C. Oil spray nozzle	29
D. Dipstick	29
• Cooling System	29
A. Engine Cooling	29
B. Oil Cooler	30
• Electrical System	30
A. General	30
B. Battery	31
C. Wiring Circuit	32
D. Ignition System	32
E. Ignition Coil	32
F. Distributor	33
G. Spark Plugs	34
H. Ignition Cables	35
I. Starter Solenoid	35
J. Starting Motor Overhaul	35
• Exhaust System	38
A. Exhaust Pipe and Muffler	38
• Engine Controls	39
A. General	39
B. Choke Control	40
C. Throttle Control	40
D. Governor 40	40
• Engine Reassembly	41
A. Tappets, Camshaft, and Crankshaft	41
B. Cylinders	42
C. Piston and Connecting Rod Assemblies	42
D. Oil Pump	42
E. Oil Pan	43
F. Idler Gear	43
G. Gear Cover	43
H. Valve Clearance Adjustment	43
I. Governor-Distributor Housing	43
J. Cylinder Heads	43
K. Air Shrouding and Alternator	44
L. Flywheel	44
M. Modules	44
N. Distributor and Timing - (Not Operating)	44
O. Carburetor	45
P. Firing Order	45

•	Testing Rebuilt Engine	45
A.	Ignition Timing—Operating (Not installed in KID)	45
B.	Ignition Timing (Installed in KID)	46
C.	Carburetor Setting (Operating)	46
•	Engine Troubleshooting	47
V.	GEARBOX	55
VI.	TRANSMISSIONS AND HYDRAULICS	57
•	Hydrostatic Transmissions	57
A.	Purpose	57
B.	General Information	57
C.	Description	58
D.	Disassembly	60
1.	Removal of Hydrostatic Pump and Motor	60
2.	Removal of Transmission Gaskets	60
3.	Removal of Low Pressure Relief Valve Assembly	60
4.	Removal of Replenishing High Pressure Relief Valve	61
5.	Disassembly of Replenishing Pump	61
6.	Removal of Coupling Sleeve	62
7.	Removal of Snap Ring from Pump Shaft	62
8.	Removal of Bearing Coupling Sleeve	62
9.	Removal of Rotating Group Assembly	63
10.	Disassembly of Rotating Group Assembly	63
11.	Disassembly of Cylinder Block Subassembly	64
12.	Removal of Snap Ring	65
13.	Cylinder Block—Disassembled	65
14.	Removal of Swash Plate	66
15.	Removal of Shaft	66
16.	Removal of Pintles and Yoke	67
17.	Removal of Bearings From Valve Plates	68
18.	Removal or Replacement of Pump or Motor Shaft Seal	70
19.	Torquing Procedures	71
E.	Inspection and Repair	72
1.	Valve Plate	72
2.	Rotating Group	72
3.	Swash Plate	72
4.	Bearings and Drive Shaft	72
5.	Vanes, Rotor, and Ring	73
F.	Assembly	73
1.	Piston Pump	73
2.	Replenishing Pump and Valving	73
G.	Testing	74
1.	Precautions In Starting Vehicle After Repairing Hydraulic Unit	74
2.	Adding Fluid To the System	74
3.	Lubrication	74
4.	Replacement Parts	74

5. Adjustments	74
H. Transmission Controls	74
• Transmission Troubleshooting	77
• Hydraulic System	83
• Implement Hydraulic Circuit	85
VII. DRIVE SYSTEM	89
• Drive Chains	89
A. Main Drive Chain (No. 1)	89
B. No. 2 Drive Chain	90
C. No. 3 Drive Chain	91
D. No. 4 Drive Chain	91
E. No. 5 Drive Chain	91
• Jackshaft and Jackshaft Sprocket Assemblies	92
• Axles and Axle Sprockets	94
A. No. 1 Axle and Axle Sprocket	94
B. No. 2 Axle and Axle Sprocket	95
C. No. 3 Axle and Axle Sprocket	96
D. No. 4 Axle and Axle Sprocket	96
• Axle Bearings	96

LIST OF ILLUSTRATIONS

Figure	Title	Page
III- 1	Cargo Deck	7
III- 2	Fuel Tank Assembly	8
III- 3	Control Console and Chain Guard	8
IV- 1	Kid Engine	10
IV- 2	PTO Shaft Assembly	11
IV- 3	Engine Compartment	12
IV- 4	Power Train	12
IV- 5	Flywheel Removal	13
IV- 6	Engine Assembly	14
IV- 7	Continuity Checks-Stator, Rectifier and Regulator	15
IV- 8	Distributor and Ignition Coil	16
IV- 9	Removing Gear Cover	16
IV-10	Removal of Idler Gear Shaft	17
IV-11	Oil Pan Removal	17
IV-12	Removal of Oil Pump	17
IV-13	Connecting Rod Disassembly	18
IV-14	Removing Crankshaft	18
IV-15	Measuring Cylinder Bore	19
IV-16	Grinding Cylinder Ridge	19
IV-17	Table of Tolerances	20
IV-18	Cylinder Honing	20
IV-19	Cylinder Bore Crosshatch Pattern	20
IV-20	Piston, Ring and Rod Clearances	22
IV-21	Piston and Rings	23
IV-22	Removing Valves	23
IV-23	Valve Refacing	24
IV-24	Measuring Valve Stems	24
IV-25	Gear Train	25
IV-26	Camshaft Removal	25
IV-27	Carburetor	26
IV-28	Carburetor Float Setting	27
IV-29	Air Cleaner	27
IV-30	Oil Pump Disassembly	28
IV-31	Engine Oil Filter	29
IV-32	Oil Spray Nozzle	29
IV-33	Removal of Air Shrouding	29
IV-34	Oil Cooler Removal	30
IV-35	Electrical Schematic	31
IV-36	Flywheel Alternator	31
IV-37	Ignition Circuit	33
IV-38	Distributor Assembly	34
IV-39	Starter and Solenoid	35
IV-40	Starting Motor Assembly	36
IV-41	Starting Motor Lock-Torque Test	38
IV-42	Exhaust System	38
IV-43	Engine Controls	39

IV-44	Governor Assembly	41
IV-45	Governor Controls	41
IV-46	Piston Ring Installation	42
IV-47	Adjusting Valves	43
IV-48	Cylinder Head Bolt Tightening Sequence	43
IV-49	Installing Distributor	44
IV-50	Carburetor Installed	45
IV-51	Timing Engine (Operating—Not Installed in K1D)	46
IV-52	Ignition Timing Tool	46
V- 1	Gearbox Installation	55
VI- 1	Hydrostatic Transmission	57
VI- 2	Transmission Special Tools	58
VI- 3	Transmission Assembly—Motor In Forward Position	58
VI- 4	Transmission Assembly—Valve Plate In Forward Position	59
VI- 5	Transmission Assembly—Replenishing Pump In Forward Position	59
VI- 6	Transmission Assembly—Valve Plate Mounting	59
VI- 7	Removal of Hydrostatic Pump From Valve Plate	60
VI- 8	Transmission Units and Gaskets	60
VI- 9	Removal of Low Pressure Relief Valve Assembly	60
VI-10	Removal of Replenishing High Pressure Relief Valves (Two)	61
VI-11	Disassembly of Replenishing Pump	61
VI-12	Disassembly of Replenishing Pump	61
VI-13	Removal of Coupling Sleeve	62
VI-14	Removal of Snap Ring From Pump Shaft	62
VI-15	Removal of Coupling Sleeve	62
VI-16	Disassembly of Rotating Group Assembly	63
VI-17	Disassembly of Rotating Group Assembly	63
VI-18	Disassembly of Rotating Group Assembly	63
VI-19	Disassembly of Rotating Group Assembly	63
VI-20	Disassembly of Cylinder Block Subassembly	64
VI-21	Special Tool-Cylinder Block Spring Tension	64
VI-22	Removal of Snap Ring from Cylinder Block	65
VI-23	Cylinder Block Disassembled	65
VI-24	Cylinder Blocks and Pistons	65
VI-25	Removal of Swash Plate	66
VI-26	Removal of Shaft	66
VI-27	Removal of Shaft	66
VI-28	Removal of Shaft	67
VI-29	Removal of Shaft	67
VI-30	Removal of Pintles and Yoke	67
VI-31	Removal of Pintles and Yoke	68
VI-32	Removal of Pintles and Yoke	68
VI-33	Removal of Pintles and Yoke	68
VI-34	Removal of Pintles and Yoke	69
VI-35	Removal of Pintles and Yoke	69
VI-36	Removal of Pintles and Yoke	69
VI-37	Removal of Bearings from Valve Plates	69
VI-38	Removal or Replacement of Pump or Motor Shaft Seal	70

VI-39	Shaft Seal Driver	70
VI-40	Removal or Replacement of Pump or Motor Shaft Seal	71
VI-41	Removal or Replacement of Pump or Motor Shaft Seal	71
VI-42	Torquing Yoke Screws	71
VI-43	Torquing Replenishing Pump Cover Screws	71
VI-44	Torquing Transmission Housing Screws	72
VI-45	Piston-and-Shoe Subassembly Tolerances	72
VI-46	Transmission Hydraulic Schematic	73
VI-47	Transmission Controls	75
VI-48	Simplified Flow Diagram—KID Hydraulic System	83
VI-49	Piping—KID Hydraulic System	84
VI-50	Hydraulic Oil Cooler Cleaning	85
VI-51	Implement Hydraulic Circuit	86
VII-1	Chain Drive System	89
VII-2	Identification of Chains and Sprockets	90
VII-3	Chain Wear	90
VII-4	Jackshaft Assembly	93
VII-5	Sprocket Wear	94
VII-6	Axle Sprocket Locations	95
VII-7	Axle Bearings—Inner and Outer	97

